




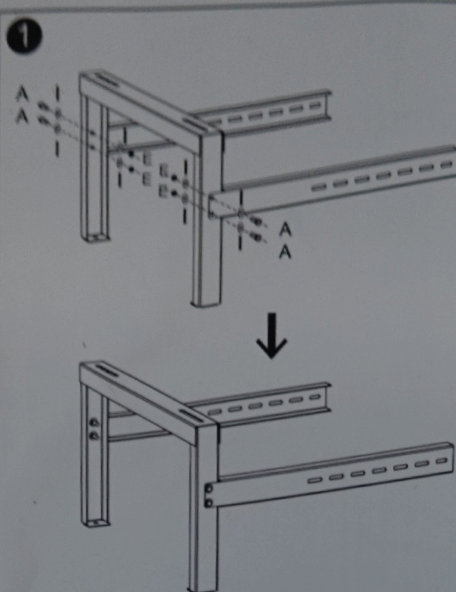


1. Mount the two outside crossbars first.

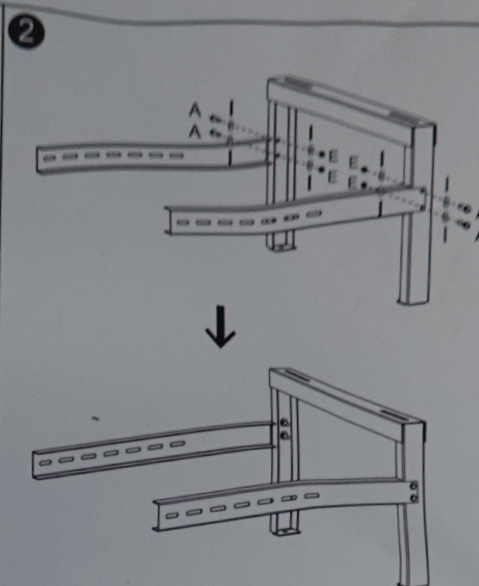


2. Mount the two inner crossbars.

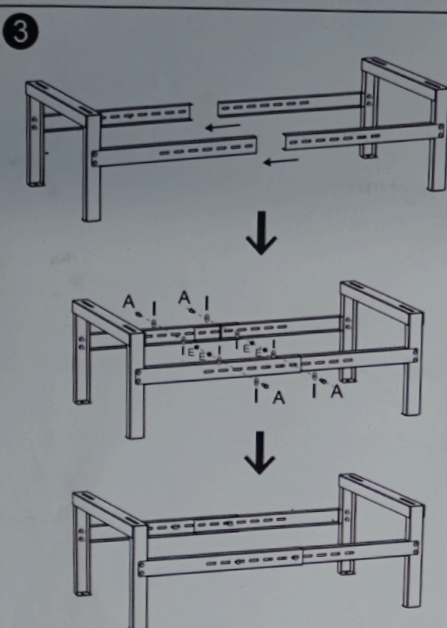


3. Adjust the length of the crossbars, then mount the screws.

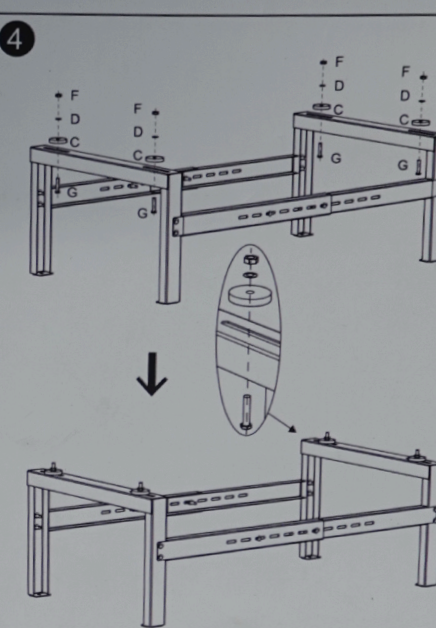

4. Mount anti-vibration pad.

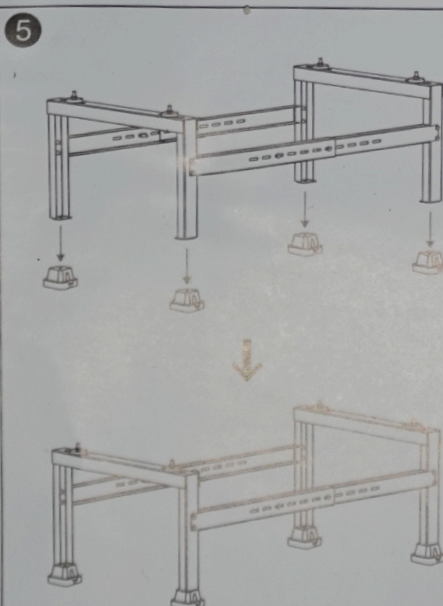

5. Put the frame on the base.

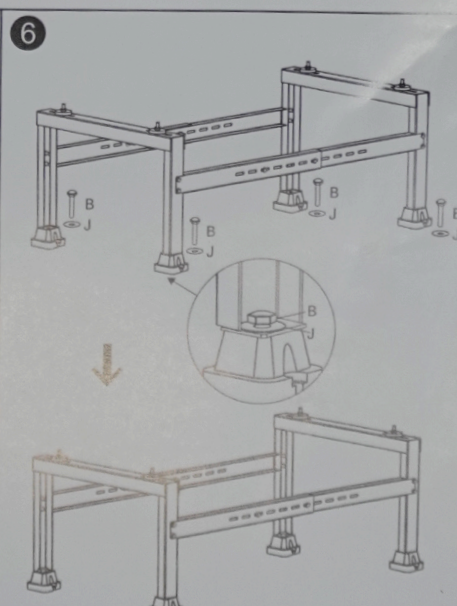

6. Mount the final nuts.